



DM30 MANUAL



IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions
- Keep this instruction manual
- Pay close attention to all the warnings
- Follow all instructions
- Do not use near water
- Do not, under any circumstance, expose to any dripping or splashing liquid
- Do not place items with liquids (such as vases, glasses or bottles of liquid) on top of the amp
- Clean only with dry cloth
- Do not block any ventilation openings
- Install in accordance with the manufacturer's instructions
- Do not install near anything that produces heat. This includes things such as radiators, heaters, stoves and other amplifiers
- Do not modify or change the AC plug. A grounding type plug has two blades and a third grounding prong. The third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet
- Do not allow the power cable to be bent, pinched, walked on, or put in any such place where damage may occur
- Unplug the amplifier during lightning storms or when unused for long periods of time
- Contact manufacturer or authorized repair technician when servicing is needed. Servicing is required when the amplifier has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

- Excessive sound pressure from earphones and headphones can cause hearing loss
- No naked flame sources, such as candles should be placed on or near the apparatus
- If needed, lift amplifier with care. Use a trolley as needed, but caution is advised to prevent the trolley tipping over

INTRODUCTION

Thank you for purchasing the Artist DM30 Drum Amplifier! Please read this user manual thoroughly to help you understand how to use your new amp and if you have any questions don't hesitate to reach out to us for assistance.

If you want to learn more about Artist Guitars, head to our website!

Australia

email: sales@artistguitars.com.au

phone: 1300 489 816

New Zealand

email: sales@artistguitars.co.nz

phone: 0800 025 467

United Kingdom

email: sales@artistguitars.co.uk

phone: 0 808 198 0084

United States


email: sales@artist-guitars.com

phone: 800 983 1047

FEATURES

Artist DM30 is a compact amplifier featuring a 10" full range speaker. The DM30 speakers are designed for ideal response to electric drum kit frequencies, and are also compatible with any keyboard, synthesiser, electric piano or even acoustic guitar. Core DSP technology means this compact amp always performs at its best and will outperform many similar amps.

FRONT PANEL

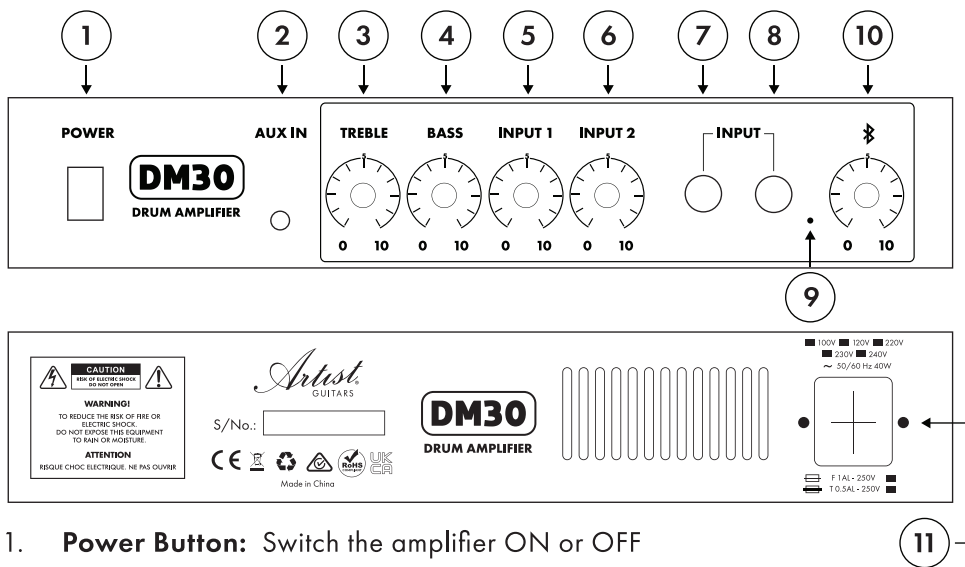

1. **Power Button:** Switch the amplifier ON or OFF
2. **AUX IN:** Auxiliary input 3.5mm stereo cable for playing music
3. **Treble Control:** Adjusts treble frequency level
4. **Bass Control:** Adjusts low frequency level
5. **Input 1 Volume Control:** Controls volume level of Input 1
6. **Input 2 Volume Control:** Controls volume level of Input 2
7. **Input 1:** Connect to instrument using a 6.35mm or ¼ inch instrument cable
8. **Input 2:** Connect to a second instrument using a 6.35mm/ ¼ inch instrument cable
9. **Bluetooth Indicator Light:** Indicates Bluetooth device is connected
10. **Bluetooth Volume:** Switches ON and controls the volume level of connected Bluetooth device. Bluetooth is switched OFF when the control is at 0, turn this clockwise to switch Bluetooth ON and control the volume level. Select "Artist DM30" on your device to connect, when successfully paired you will hear a notification through the speaker and the Indicator Light (9) will turn orange.

REAR PANEL

11. DC-IN: Use supplied power adaptor to provide power to the amplifier

CONNECT TO BLUETOOTH DEVICE

To connect your device, ensure the amplifier is switched on, and the Bluetooth control is turned up (ON). On your device, find the amplifier (Bluetooth name: Artist DM30) and select "pair".

You can use the Bluetooth volume control in conjunction with the device volume to control the level of your connected audio.

SPECIFICATIONS

Power Output: 30W

Power Consumption: 40W

Speaker: coaxial (10" LF + 3" HF)

Input: AC220-240V

Input 1 (instrument): 6.35mm (1/4 inch) instrument cable

(S/N): -35dB

Input Impedance: 68K

EQ: Bass: +/- 15dB 60Hz

Treble: +/- 15dB 10KHz

Input 2 (instrument): 6.35mm (1/4 inch) instrument cable

AUX input: -10dB 1KHz

S/N: 35dB

Input Impedance: 68Kohm

Bluetooth: V4.0 Version, maximum Bluetooth distance 10m

Net Weight: 12.7Kg

Gross Weight: 14.8Kg

Size: 380(L) X 380(W) X 405(H)mm

If you require any assistance or if you want to learn more about Artist Guitars, head to our website or reach out via phone or email.

Australia

email: sales@artistguitars.com.au

phone: 1300 489 816

New Zealand

email: sales@artistguitars.co.nz

phone: 0800 025 467

United Kingdom

email: sales@artistguitars.co.uk

phone: 0 808 198 0084

United States

email: sales@artist-guitars.com

phone: 800 983 1047

Artist[®]
GUITARS

Artist[®]
GUITARS