 


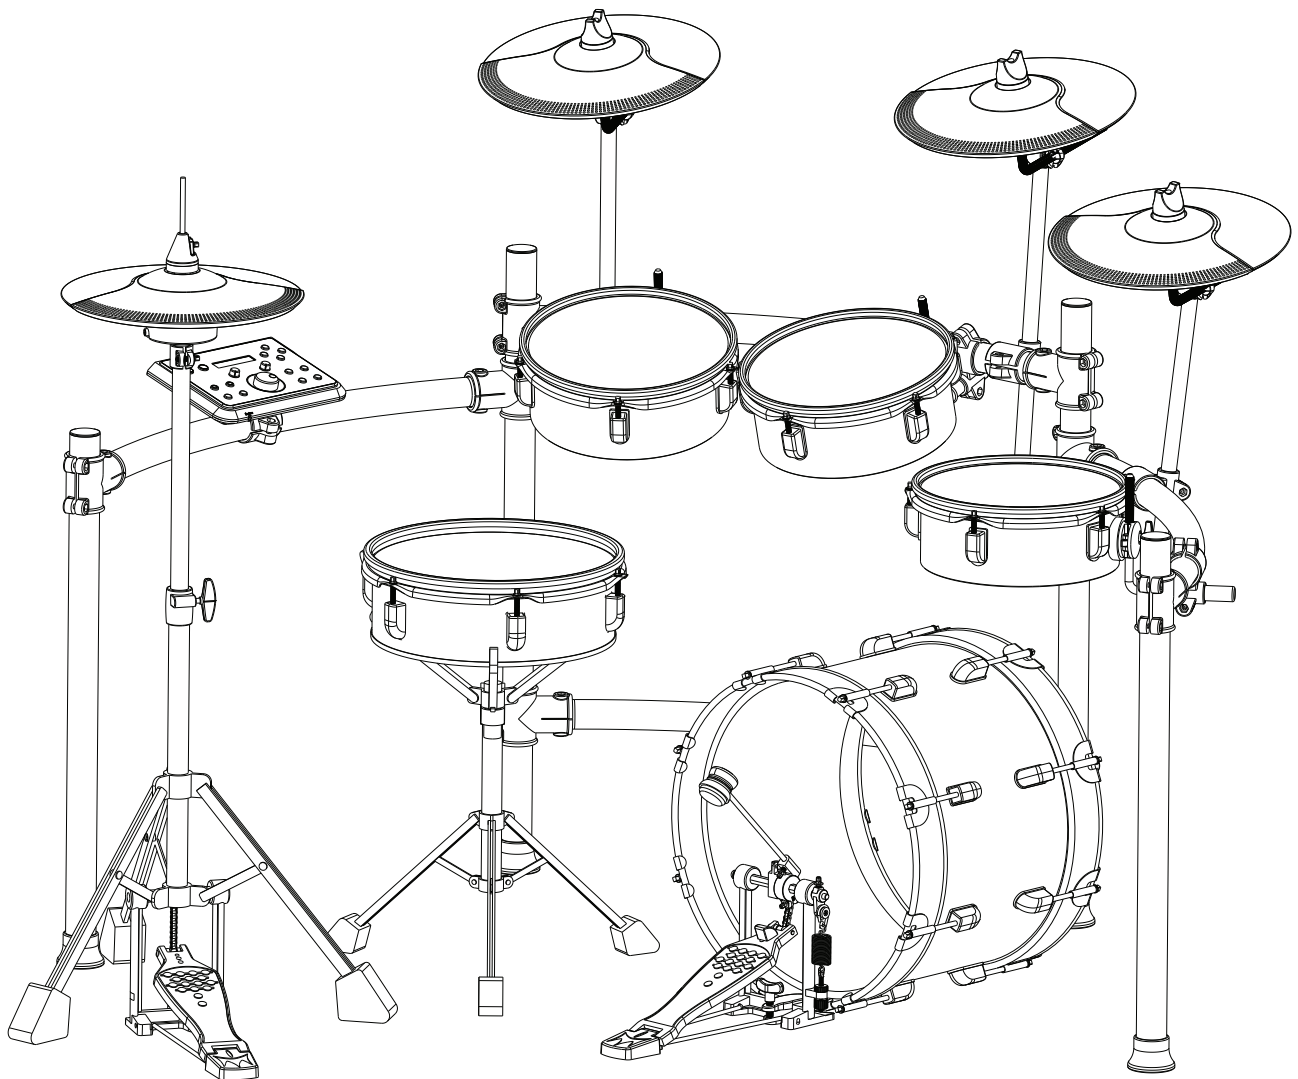

EAD916 MANUAL



INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electromagnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in another location.

PRECAUTIONS

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet with voltage that is different to what your equipment is made for.

Unplug the AC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

- Clean only with a soft, dry cloth
- Do not use paint thinners, solvents, cleaning fluids, or chemical impregnated wiping cloths

Handling


- Do not apply excessive force to the switches or controls
- Do not let Paper, metal, or any other object hit the Drumkit or the Power Adaptor
- If this happens, unplug the AC adaptor from the wall outlet
- Then have the instrument inspected by qualified service personnel

Disconnect all cables before moving the instrument.

CONTENTS


Installation Instructions	6
Frame Installation	7
Installing TOM Pads	8
Installing the Snare Drum	8
Installing Cymbals	8
Installing the Kick drum	8
Installing Hihat Pad and Pedal	9
Installing the Module	10
Panel Description	11
Settings	12
Kit Selection	12
Metronome	12
Reverb	12
Demo Songs	13
Recording	13
Creating User Kits	13
Pad Volume Settings	14
Trigger Settings	14
MIDI Channel Settings	14
Hi-Hat and Snare Drum Type	15
Factory Reset	15
Bluetooth Settings	15
Drum Kit List	16
Drum Sample List	17
Demo Song List	18

 INSTALLATION INSTRUCTIONS

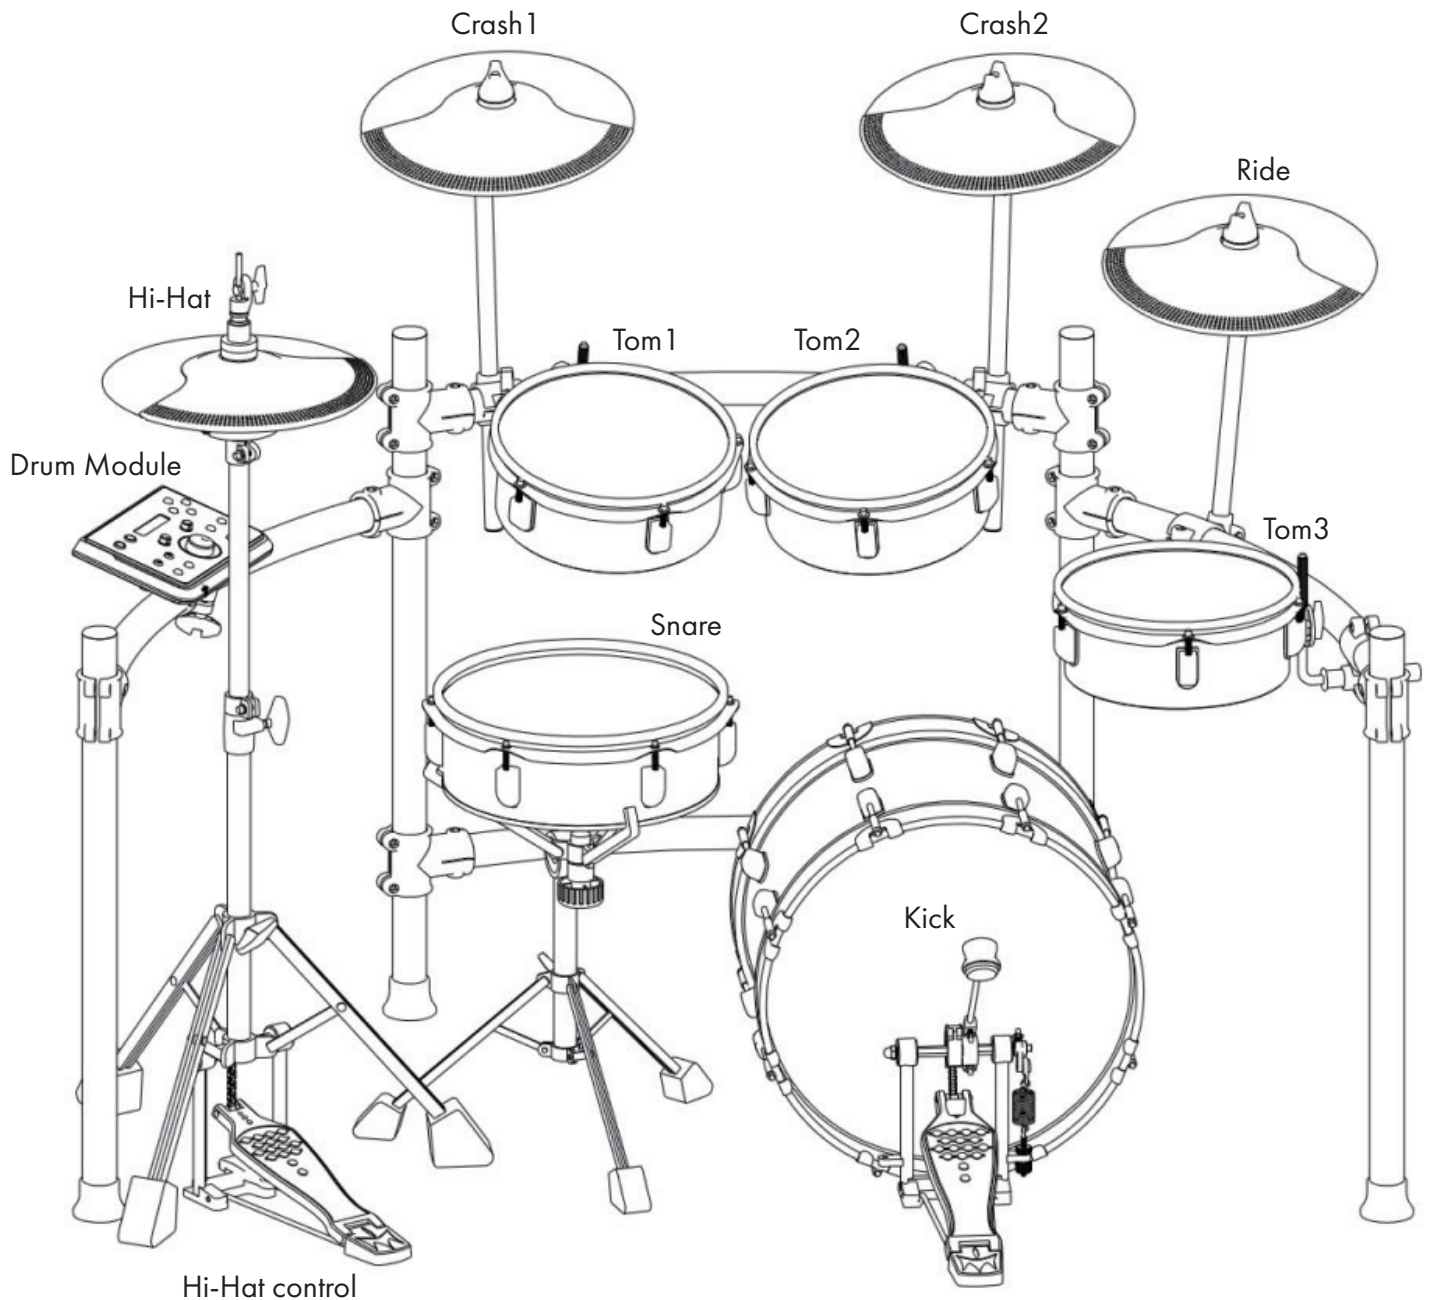


1. Frame Installation:

 Please follow these steps to install the frame:

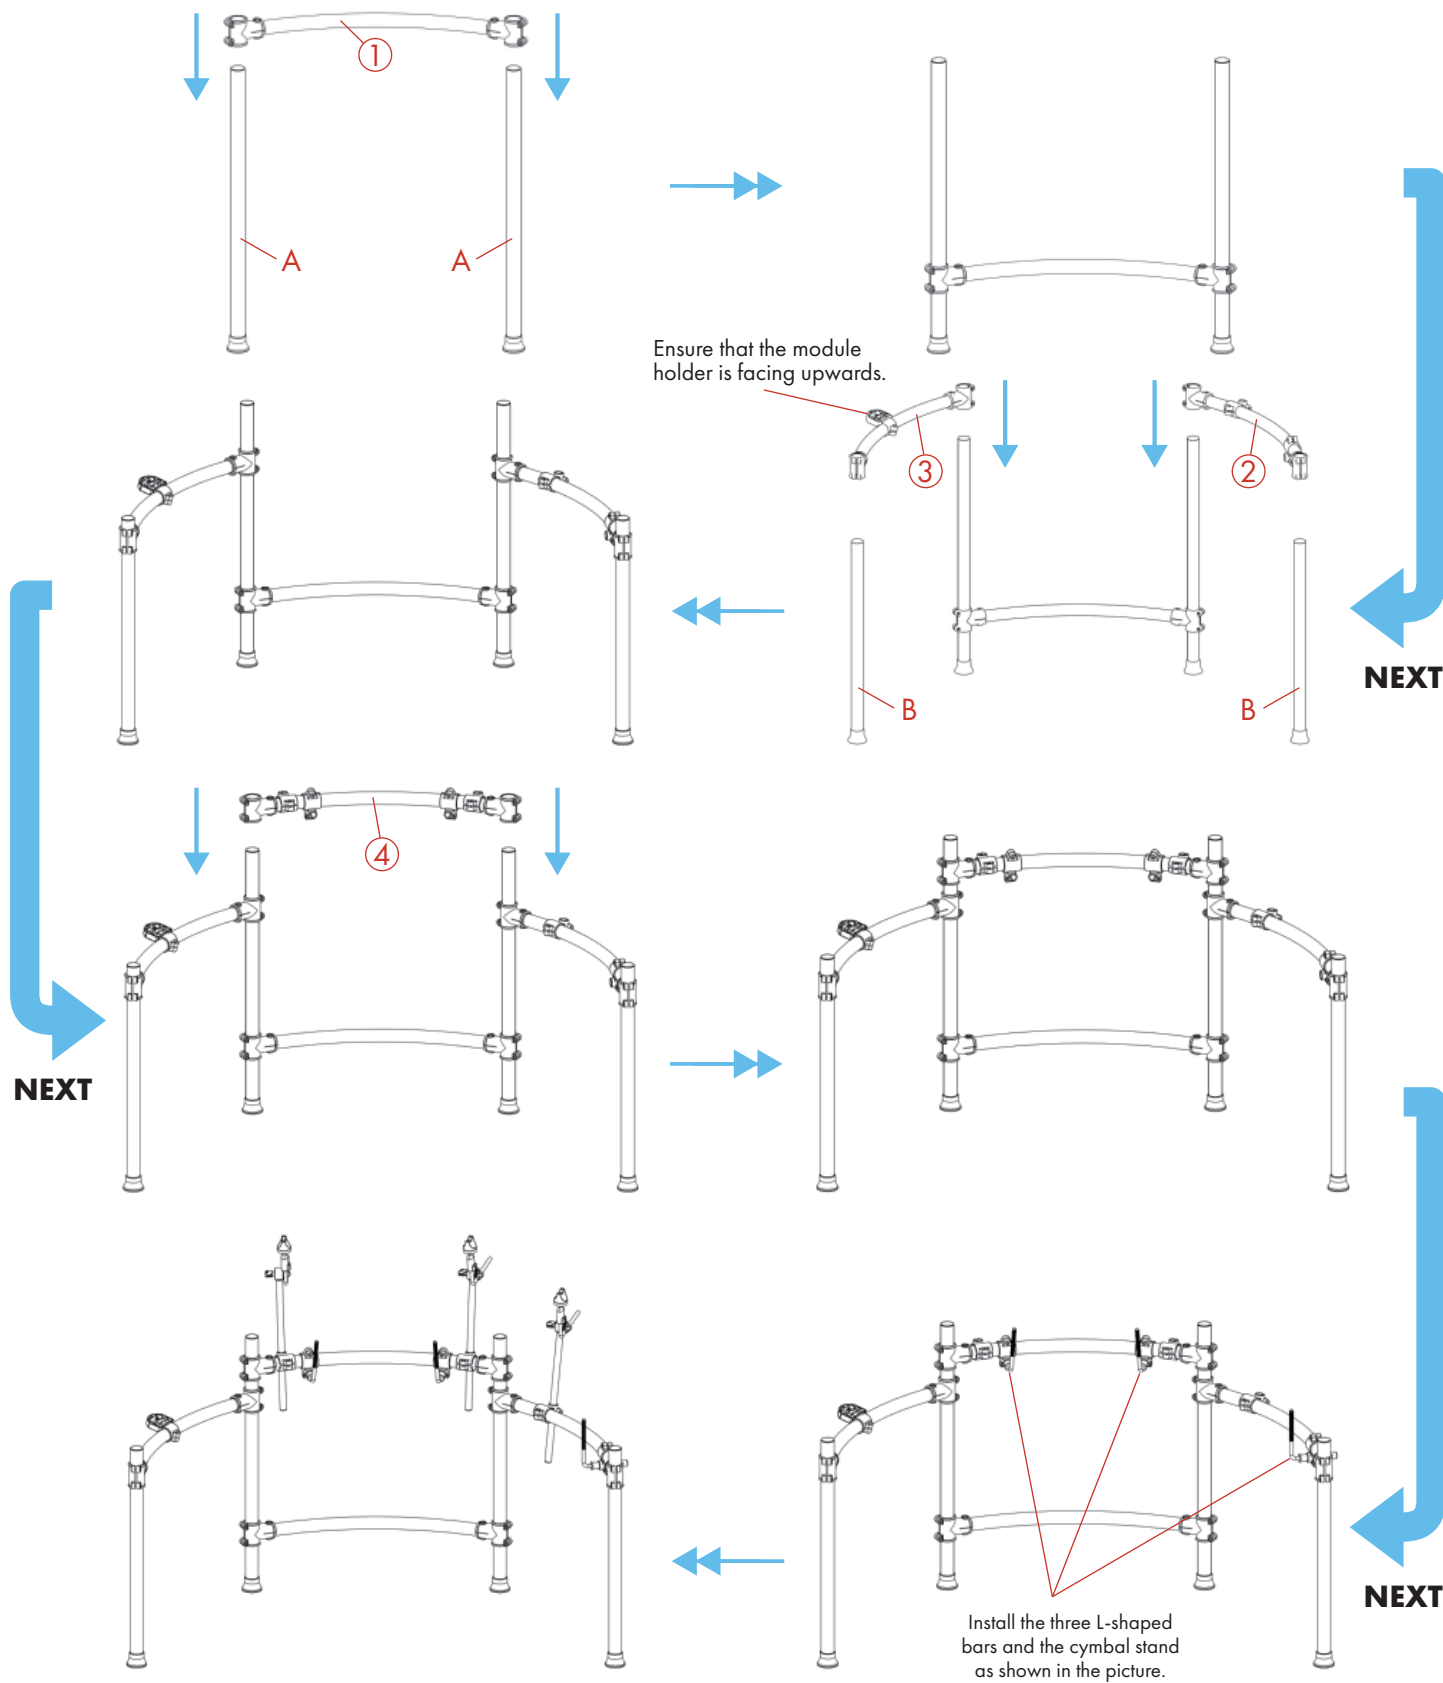


2. Installing TOM Pads:

 Install the TOM pad onto the L-shaped bar on the frame. Adjust the height and angle, then tighten the finger screw on the TOM pad.

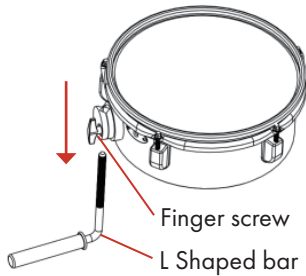


3. Installing the Snare Drum:

 
1. Insert the claw part into the bottom of the stand, adjust the height, and tighten the finger screw on the stand.

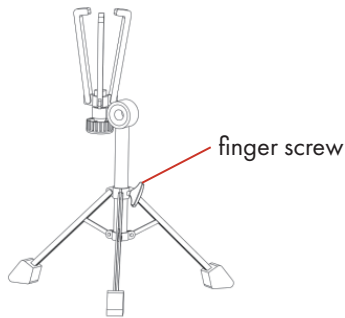

 2. Loosen the screw underneath the claw to open it.

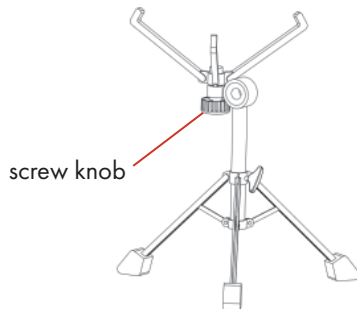


 3. Place the snare drum on the snare stand, then tighten the claw.

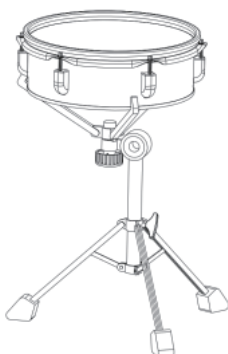

4. Installing Cymbals:

 
1. Follow the diagram to install the cymbals on the cymbal stand.

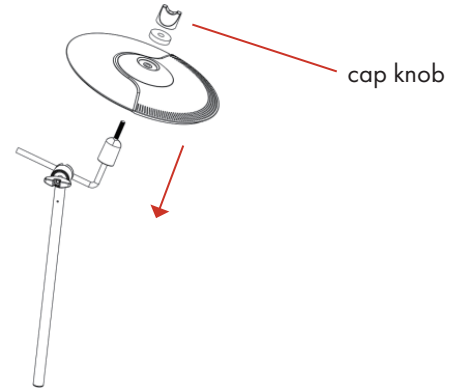


2. Adjust the angle of the cymbals as needed.

5. Installing the Kick Drum:

 
1. Attach the hammer to the kick pedal, adjust the height, and tighten the screw.

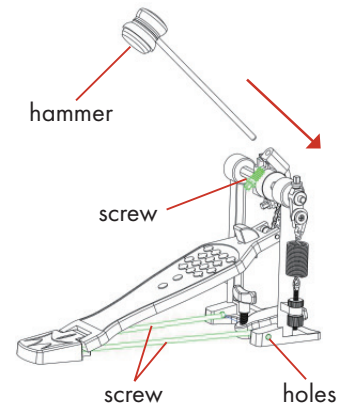

 2. Install the standing bar into the holes on the kick pedal.
3. Adjust the direction of the kick drum legs by loosening the finger screw.
4. Loosen the screw to adjust the length of the kick drum legs, ensuring the kick drum is stable on the floor. Then tighten the screw and finger screw.

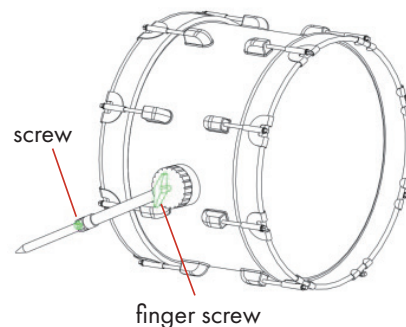


5. Attach the kick pedal to the kick drum, clipping it to the bottom front part.

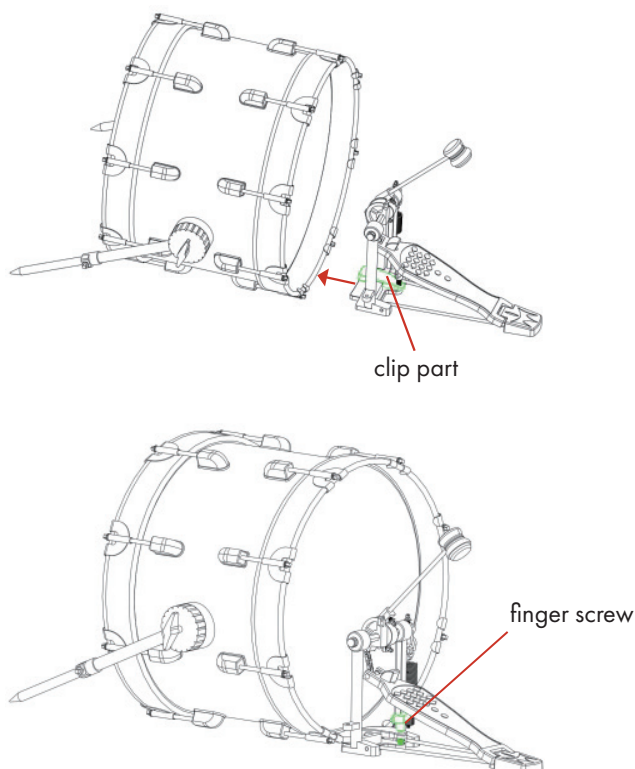 


Note: Ensure the trigger position is at the top front of the snare drum.

6. Installing the Hi-Hat Pad and Pedal:

 
1. Loosen the stand screw, open the support foot, adjust it, and retighten the screw.

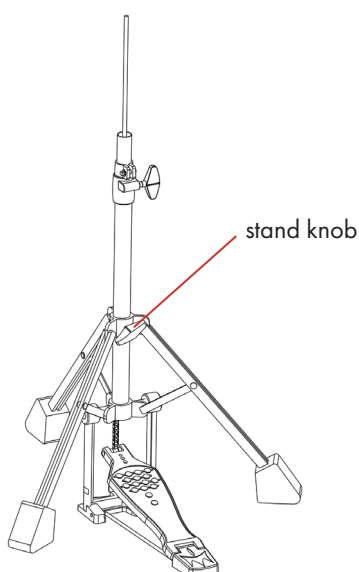

 
2. Loosen the height adjustment screw, lift the tube to be at a comfortable height, then retighten the screw.

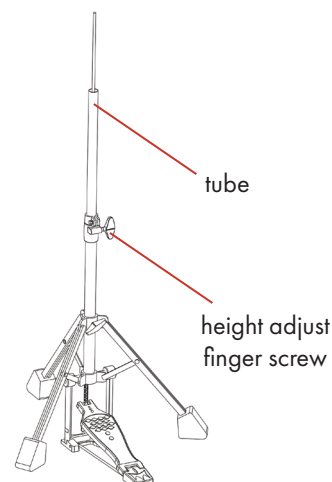

 
3. Place the Hi-Hat trigger on the tube.

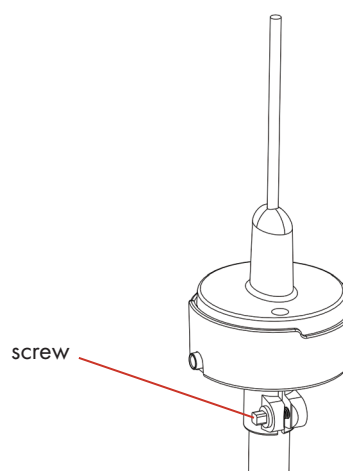

 
4. Install the Hi-Hat cymbal on top of the Hi-Hat trigger.

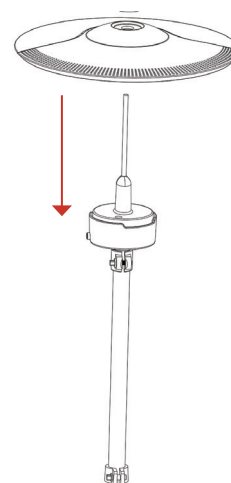

 5. Be sure to install the felt washer and clutch without pressing down on the cymbal.
6. Tighten the finger screw on the Hi-Hat pedal.

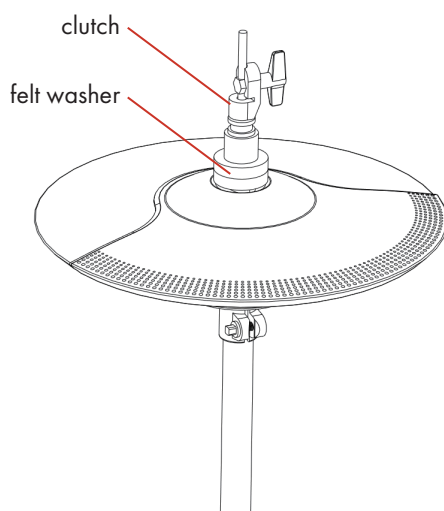


 7. Adjust the height of the Hi-Hat stand as needed.

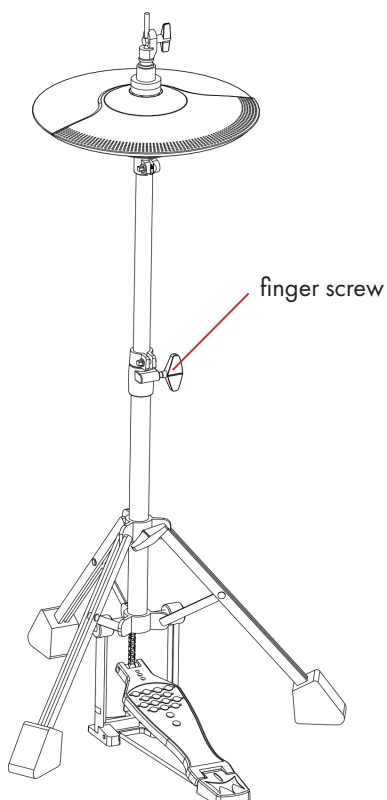


7. Installing the Module

 
1. Insert the drum cable through the module holder.

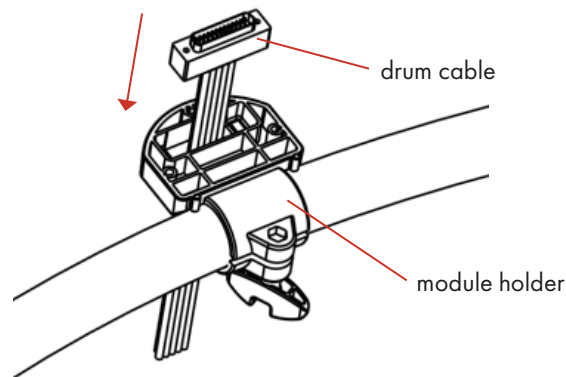

 
2. Connect the drum cable to the module and place the module onto the holder. Tighten it using the three finger screws.

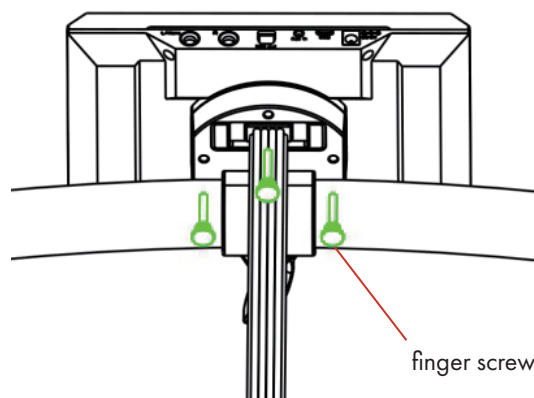

 3. Adjust the module's angle by adjusting the module holder's direction.

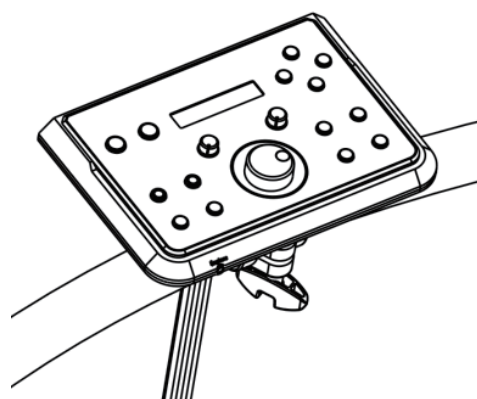

PANEL DESCRIPTION

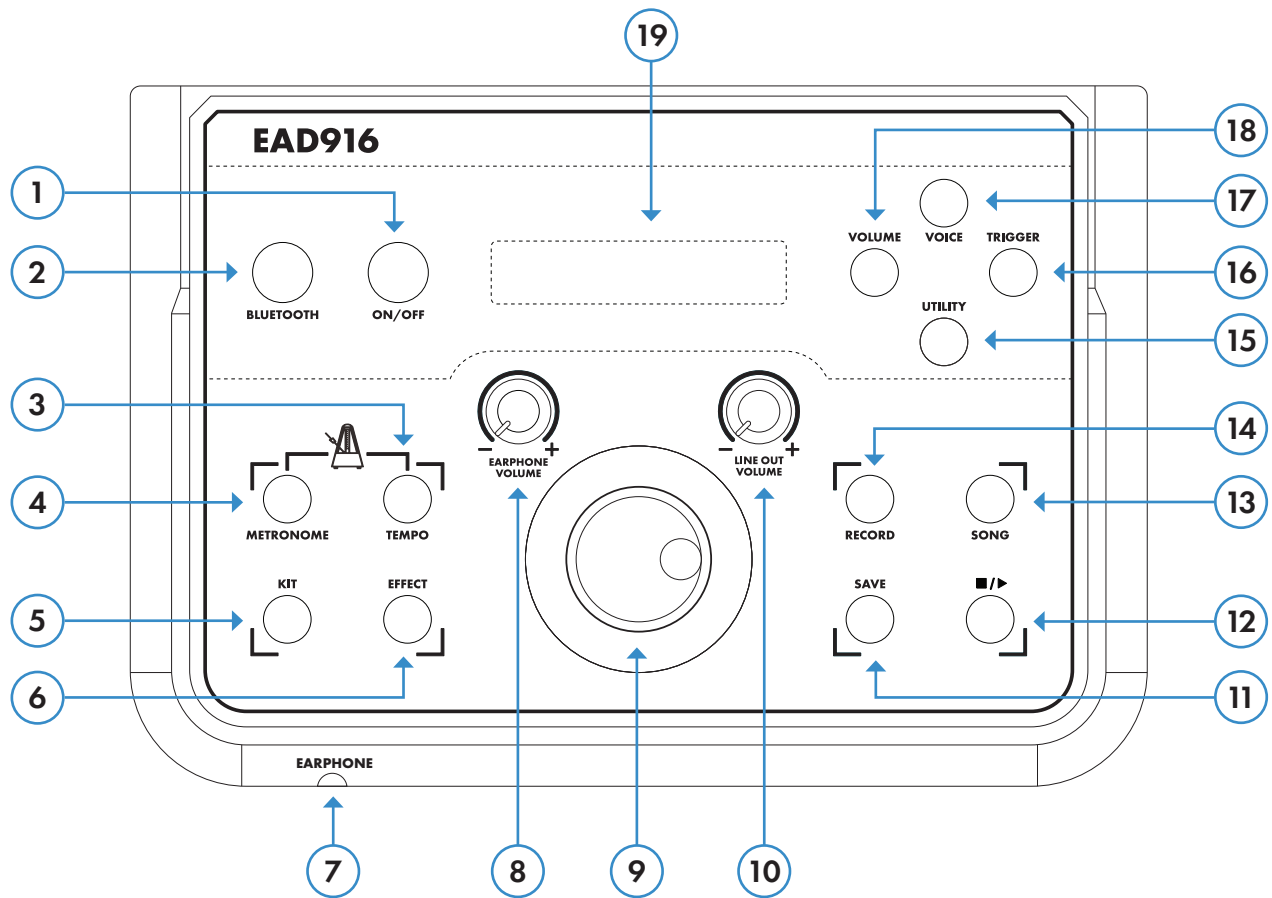 

- | | |
|-----------------------------------|---------------------------------|
| 1. Power On/Off | 11. Save Recording |
| 2. Bluetooth | 12. Demo Song Play/Pause |
| 3. Metronome Tempo | 13. Demo Song Select |
| 4. Metronome On/Off | 14. Record Select |
| 5. Kit Menu | 15. Utility Menu |
| 6. Effect Menu | 16. Trigger Menu |
| 7. Headphone Output | 17. Voice Menu |
| 8. Headphone Output Volume | 18. Volume Menu |
| 9. Select Wheel | 19. Display Screen |
| 10. Main Output Volume | |

SETTINGS

Kit Selection

The EAD916 comes with 13 preset kits and 8 user kits. To select the desired kit, press the **KIT** button, then use the encoder wheel to select a preset or user kit.

Metronome

Press the **METRO** button to start the metronome. The LED will flash, and you will hear beeps immediately.

You can adjust the time signature, volume, and tempo using the encoder wheel.

To adjust the time signature, press **METRO**, turn the encoder wheel until you see it flashing next to **METER**. Press the encoder wheel. You can now turn the wheel left or right to add or remove beats from the time signature.

To adjust the metronome volume, press **METRO**, turn the encoder wheel until you see it flashing next to **VOLUME**. Press the encoder wheel. Turn the wheel left or right to reach your desired volume.

To adjust the tempo, press **TEMPO**. Turn the wheel left or right to reach your desired tempo.

Reverb

The EAD916 comes with five different reverb sounds. To adjust the reverb, press the **EFFECTS** button and use the encoder wheel to choose settings for **TYPE**, **LEVEL**, **TIME**, **SIZE**, **H GAIN**, and **L GAIN**.

Once you have found the setting you want to adjust, press the encoder wheel to adjust the value of that setting.

Demo Songs

This drum kit comes with 30 demo songs to help you practice and learn drumming. To begin playing with a track, press the **SONG** button to access the demo song menu. Use the encoder wheel to select a song, then press the **START/STOP** button to play or stop it.

You can also deactivate or adjust the volume of the drums in the demo song so that you only hear your own playing. To do so, press **SONG**, turn the encoder wheel until you get to **DRUM**, then press the encoder wheel and turn it to turn the backing drums on and off.

RECORDING

1. Press the **RECORD** button to start recording. The LCD will display "ON". When you are finished, press again to stop recording ("OFF").
2. To play back the recorded song, press the **START/STOP** button.

Note: The recorded file will be overwritten with any new recordings.

CREATING USER KITS

1. Press the **VOICE** button and hit the pad or cymbal you want to adjust. The LCD will show the name of the selected pad or cymbal.
2. Use the encoder wheel to adjust the volume, reverb, pan, MIDI key, or other settings. Press the encoder wheel to confirm each setting.
3. After finishing adjustments, press **SAVE** to save the user kit to one of the available user kit slots. The EAD916 comes with 600 samples, so feel free to customise the user kits however you like!

PAD VOLUME SETTINGS

1. To adjust the volume of each pad, please **VOLUME** and hit the pad or cymbal you want to adjust. The screen will display the name of the pad.
2. Use the encoder wheel to adjust the volume, reverb, pan, MIDI key, or other settings. Press the encoder wheel to confirm the setting, then turn left or right to adjust the value.
3. After finishing adjustments, press **SAVE** to save the user kit to one of the available user kit slots.

TRIGGER SETTINGS

1. Press the **TRIGGER** button, then hit the pad or cymbal you want to adjust. The LCD will display its name.
2. Use the encoder wheel to adjust settings like **Threshold**, **Velocity Curve**, **Sensitivity**, **Mask Time**, and **Crosstalk**.
3. Press the encoder wheel to confirm the setting, then turn left or right to adjust the value.

MIDI CHANNEL SETTINGS:

1. Press the **UTILITY** button, then use the encoder wheel to select the **MIDI CH** option.
2. Adjust the MIDI channel, then press the encoder wheel to confirm.
3. This is useful for syncing the EAD916 to your DAW and ensuring that the pads on the drum kit match the samples of your virtual drum program.

HI-HAT AND SNARE DRUM TYPE

1. If you want to swap what sort of hi-hat or snare you are using, then you will need to adjust these settings.
2. For a hi-hat, you can use either a pedal (001) or a stand (002). The unit will default to a hi-hat stand. For a snare, you can use either a 12" snare (001), an 8-10" snare (002), or a 14" snare (003). The unit will default to a 12" snare.
3. Press the **UTILITY** button to select either **HIHAT TYPE** or **SNARE TYPE**.
4. Use the encoder wheel to choose the correct type, then press the encoder wheel to confirm.

FACTORY RESET

1. Press the **UTILITY** button and select **DRUM RESET** from the menu.
2. Turn the encoder wheel to select **ON**, then press the encoder wheel again to reset the device.

BLUETOOTH SETTINGS

1. Press the **BLUETOOTH** button to toggle Bluetooth on or off.
2. When enabled, the Bluetooth name will appear as "**EDRUM**". If you have trouble reconnecting, remove the device from the Bluetooth list on your phone and re-pair it.

DRUM KIT LISTS

PRESET	
1	ROCK1
2	ROCK2
3	FUNK
4	HIPHOP
5	METAL
6	JAZZ
7	BRUSH
8	POP
9	LATIN
10	DANCE
11	ORCH
12	PERC.1
13	PERC.2
USER	
14	USER01
15	USER02
16	USER03
17	USER04
18	USER05
19	USER06
20	USER07
21	USER08

DRUM INSTRUMENT LIST

No.	NAME	No.	NAME	No.	NAME	No.	NAME	No.	NAME	No.	NAME	No.	NAME
KICK	TOM	TOM	PERCUSSION	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND	EXPAND
1	KICK01	86	TOM01	171	OPEN HIHAT09	254	HI BONGO	339	EXPAND047	425	EXPAND133	511	EXPAND219
2	KICK02	87	TOM02	172	OPEN HIHAT10	255	LO BONGO	340	EXPAND048	426	EXPAND134	512	EXPAND220
3	KICK03	88	TOM03	173	OPEN HIHAT11	256	METED HI CONGA	341	EXPAND049	427	EXPAND135	513	EXPAND221
4	KICK04	89	TOM04	174	OPEN HIHAT12	257	OPEN HI CONGA	342	EXPAND050	428	EXPAND136	514	EXPAND222
5	KICK05	90	TOM05	175	OPEN HIHAT13	258	LO CONGA	343	EXPAND051	429	EXPAND137	515	EXPAND223
6	KICK06	91	TOM06	176	OPEN HIHAT14	259	HI TIMBALE	344	EXPAND052	430	EXPAND138	516	EXPAND224
7	KICK07	92	TOM07	177	OPEN HIHAT15	260	LO TIMBALE	345	EXPAND053	431	EXPAND139	517	EXPAND225
8	KICK08	93	TOM08	178	HAL HIHAT01	261	HI AGOGO	346	EXPAND054	432	EXPAND140	518	EXPAND226
9	KICK09	94	TOM09	179	HAL HIHAT02	262	LO AGOGO	347	EXPAND055	433	EXPAND141	519	EXPAND227
10	KICK10	95	TOM10	180	HAL HIHAT03	263	CABASA	348	EXPAND056	434	EXPAND142	520	EXPAND228
11	KICK11	96	TOM11	181	HAL HIHAT04	264	MARACAS	349	EXPAND057	435	EXPAND143	521	EXPAND229
12	KICK12	97	TOM12	182	HAL HIHAT05	265	SHORT WHISTLE	350	EXPAND058	436	EXPAND144	522	EXPAND230
13	KICK13	98	TOM13	183	HAL HIHAT06	266	LONG WHISTLE	351	EXPAND059	437	EXPAND145	523	EXPAND231
14	KICK14	99	TOM14	184	HAL HIHAT07	267	SHORT GUIRO	352	EXPAND060	438	EXPAND146	524	EXPAND232
15	KICK15	100	TOM15	185	HAL HIHAT08	268	LONG GUIRO	353	EXPAND061	439	EXPAND147	525	EXPAND233
16	KICK16	101	TOM16	186	HAL HIHAT09	269	CLAVE	354	EXPAND062	440	EXPAND148	526	EXPAND234
17	KICK17	102	TOM17	187	HAL HIHAT10	270	HI WOODBLOCK	355	EXPAND063	441	EXPAND149	527	EXPAND235
18	KICK18	103	TOM18	188	EHIHAT1	271	LO WOODBLOCK	356	EXPAND064	442	EXPAND150	528	EXPAND236
19	KICK19	104	TOM19	189	EHIHAT2	272	MUTED CUICA	357	EXPAND065	443	EXPAND151	529	EXPAND237
20	KICK20	105	TOM20	190	EHIHAT3	273	OPEN CUICA	358	EXPAND066	444	EXPAND152	530	EXPAND238
21	KICK21	106	TOM21	191	EHIHAT4	274	MUTED TRIANGLE	359	EXPAND067	445	EXPAND153	531	EXPAND239
22	KICK22	107	TOM22	192	EHIHAT5	275	OPEN TRIANGLE	360	EXPAND068	446	EXPAND154	532	EXPAND240
23	KICK23	108	TOM23	193	EHIHAT6	276	SHAKER	361	EXPAND069	447	EXPAND155	533	EXPAND241
24	KICK24	109	TOM24		CRASH	277	JINGLE BELL	362	EXPAND070	448	EXPAND156	534	EXPAND242
25	KICK25	110	TOM25	194	CRASH01	278	BELLTREE	363	EXPAND071	449	EXPAND157	535	EXPAND243
26	KICK26	111	TOM26	195	CRASH02	279	CASTANETS	364	EXPAND072	450	EXPAND158	536	EXPAND244
27	KICK27	112	TOM27	196	CRASH03	280	MUTED SURDO	365	EXPAND073	451	EXPAND159	537	EXPAND245
28	KICK28	113	TOM28	197	CRASH04	281	OPEN SURDO	366	EXPAND074	452	EXPAND160	538	EXPAND246
	SNARE	114	TOM29	198	CRASH05	282	E CLICK	367	EXPAND075	453	EXPAND161	539	EXPAND247
29	SNARE01	115	TOM30	199	CRASH06	283	E COWBELL	368	EXPAND076	454	EXPAND162	540	EXPAND248
30	SNARE02	116	TOM31	200	CRASH07	284	TIMPANI	369	EXPAND077	455	EXPAND163	541	EXPAND249
31	SNARE03	117	ETOM01	201	CRASH08	285	ECYMBAL	370	EXPAND078	456	EXPAND164	542	EXPAND250
32	SNARE04	118	ETOM02	202	CRASH09	286	DOWN	371	EXPAND079	457	EXPAND165	543	EXPAND251
33	SNARE05	119	ETOM03	203	CRASH10	287	DJEMBELL	372	EXPAND080	458	EXPAND166	544	EXPAND252
34	SNARE06	120	ETOM04	204	CRASH11	288	DJEMBEH	373	EXPAND081	459	EXPAND167	545	EXPAND253
35	SNARE07	121	ETOM05	205	CRASH12	289	DJEMBEH	374	EXPAND082	460	EXPAND168	546	EXPAND254
36	SNARE08	122	ETOM06	206	CRASH13	290	TAIKO	375	EXPAND083	461	EXPAND169	547	EXPAND255
37	SNARE09	123	ETOM07	207	CRASH14	291	TAIKO SIDE	376	EXPAND084	462	EXPAND170	548	EXPAND256
38	SNARE10	124	ETOM08	208	CRASH15	292	LOW GONG	377	EXPAND085	463	EXPAND171	549	EXPAND257
39	SNARE11	125	ETOM09	209	CRASH16		EXPAND	378	EXPAND086	464	EXPAND172	550	EXPAND258
40	SNARE12	126	ETOM10	210	CRASH17	293	EXPAND001	379	EXPAND087	465	EXPAND173	551	EXPAND259
41	SNARE13	127	ETOM11	211	CRASH18	294	EXPAND002	380	EXPAND088	466	EXPAND174	552	EXPAND260
42	SNARE14	128	ETOM12	212	CRASH19	295	EXPAND003	381	EXPAND089	467	EXPAND175	553	EXPAND261
43	SNARE15	129	ETOM13	213	CRASH20	296	EXPAND004	382	EXPAND090	468	EXPAND176	554	EXPAND262
44	SNARE16	130	ETOM14	214	CRASH21	297	EXPAND005	383	EXPAND091	469	EXPAND177	555	EXPAND263
45	SNARE17	131	ETOM15	215	CHINACYMBAL1	298	EXPAND006	384	EXPAND092	470	EXPAND178	556	EXPAND264
46	SNARE18	132	ETOM16	216	CHINACYMBAL2	299	EXPAND007	385	EXPAND093	471	EXPAND179	557	EXPAND265
47	SNARE19		HIHAT	217	ORCHCRASH	300	EXPAND008	386	EXPAND094	472	EXPAND180	558	EXPAND266
48	SNARE20	133	CLOSED HIHAT01	218	ECRASH1	301	EXPAND009	387	EXPAND095	473	EXPAND181	559	EXPAND267
49	SNARE21	134	CLOSED HIHAT02	219	ECRASH2	302	EXPAND010	388	EXPAND096	474	EXPAND182	560	EXPAND268
50	SNARE22	135	CLOSED HIHAT03	220	ECRASH3	303	EXPAND011	389	EXPAND097	475	EXPAND183	561	EXPAND269
51	SNARE23	136	CLOSED HIHAT04	221	ECRASH4	304	EXPAND012	390	EXPAND098	476	EXPAND184	562	EXPAND270
52	SNARE24	137	CLOSED HIHAT05	222	ECRASH5	305	EXPAND013	391	EXPAND099	477	EXPAND185	563	EXPAND271
53	SNARE25	138	CLOSED HIHAT06	223	ECRASH6	306	EXPAND014	392	EXPAND100	478	EXPAND186	564	EXPAND272
54	SNARE26	139	CLOSED HIHAT07		RIDE	307	EXPAND015	393	EXPAND101	479	EXPAND187	565	EXPAND273
55	SNARE27	140	CLOSED HIHAT08	224	RIDE01	308	EXPAND016	394	EXPAND102	480	EXPAND188	566	EXPAND274
56	SNARE28	141	CLOSED HIHAT09	225	RIDE02	309	EXPAND017	395	EXPAND103	481	EXPAND189	567	EXPAND275
57	SNARE29	142	CLOSED HIHAT10	226	RIDE03	310	EXPAND018	396	EXPAND104	482	EXPAND190	568	EXPAND276
58	SNARE30	143	CLOSED HIHAT11	227	RIDE04	311	EXPAND019	397	EXPAND105	483	EXPAND191	569	EXPAND277
59	SNARE31	144	CLOSED HIHAT12	228	RIDE05	312	EXPAND020	398	EXPAND106	484	EXPAND192	570	EXPAND278
60	SNARE32	145	CLOSED HIHAT13	229	RIDE06	313	EXPAND021	399	EXPAND107	485	EXPAND193	571	EXPAND279
61	SNARE33	146	CLOSED HIHAT14	230	RIDE07	314	EXPAND022	400	EXPAND108	486	EXPAND194	572	EXPAND280
62	SIDESTICK01	147	CLOSED HIHAT15	231	RIDE08	315	EXPAND023	401	EXPAND109	487	EXPAND195	573	EXPAND281
63	SIDESTICK02	148	PEDAL HIHAT01	232	RIDE BELLO1	316	EXPAND024	402	EXPAND110	488	EXPAND196	574	EXPAND282
64	SIDESTICK03	149	PEDAL HIHAT02	233	RIDE BELLO2	317	EXPAND025	403	EXPAND111	489	EXPAND197	575	EXPAND283
65	SIDESTICK04	150	PEDAL HIHAT03	234	RIDE BELLO3	318	EXPAND026	404	EXPAND112	490	EXPAND198	576	EXPAND284
66	SIDESTICK05	151	PEDAL HIHAT04	235	RIDE BELLO4	319	EXPAND027	405	EXPAND113	491	EXPAND199	577	EXPAND285
67	SIDESTICK06	152	PEDAL HIHAT05	236	RIDE BELLO5	320	EXPAND028	406	EXPAND114	492	EXPAND200	578	EXPAND286
68	SIDESTICK07	153	PEDAL HIHAT06	237	RIDE BELLO6	321	EXPAND029	407	EXPAND115	493	EXPAND201	579	EXPAND287
69	SIDESTICK08	154	PEDAL HIHAT07	238	ERIDE1	322	EXPAND030	408	EXPAND116	494	EXPAND202	580	EXPAND288
70	SIDESTICK09	155	PEDAL HIHAT08	239	ERIDE2	323	EXPAND031	409	EXPAND117	495	EXPAND203	581	EXPAND289
71	SIDESTICK10	156	PEDAL HIHAT09		PERCUSSION	324	EXPAND032	410	EXPAND118	496	EXPAND204	582	EXPAND290
72	SIDESTICK11	157	PEDAL HIHAT10	240	HI Q	325	EXPAND033	411	EXPAND119	497	EXPAND205	583	EXPAND291
73	SNARERIM01	158	PEDAL HIHAT11	241	SLAP	326	EXPAND034	412	EXPAND120	498	EXPAND206	584	EXPAND292
74	SNARERIM02	159	PEDAL HIHAT12	242	PUSH	327	EXPAND035	413	EXPAND121	499	EXPAND207	585	EXPAND293
75	SNARERIM03	160	PEDAL HIHAT13	243	PULL	328	EXPAND036	414	EXPAND122	500	EXPAND208	586	EXPAND294
76	SNARERIM04	161	PEDAL HIHAT14	244	STICK	329	EXPAND037	415	EXPAND123	501	EXPAND209	587	EXPAND295
77	SNARERIM05	162	PEDAL HIHAT15	245	SQ CLICK	330	EXPAND038	416	EXPAND124	502	EXPAND210	588	EXPAND296
78	SNARERIM06	163	OPEN HIHAT01	246	CLICK	331	EXPAND039	417	EXPAND125	503	EXPAND211	589	EXPAND297
79	SNARERIM07	164	OPEN HIHAT02	247	BELL	332	EXPAND040	418	EXPAND126	504	EXPAND212	590	EXPAND298
80	SNARERIM08	165	OPEN HIHAT03	248	CLAP	333	EXPAND041	419	EXPAND127	505	EXPAND213	591	EXPAND299
81	SNARERIM09	166	OPEN HIHAT04	249	TAMBRINE	334	EXPAND042	420	EXPAND128	506	EXPAND214	592	EXPAND300
82	SNARERIM10	167	OPEN HIHAT05	250	COWBELL1	335	EXPAND043	421	EXPAND129	507	EXPAND215	593	EXPAND301
83	SNARERIM11	168	OPEN HIHAT06	251	COWBELL2	336	EXPAND044	422	EXPAND130	508	EXPAND216	594	EXPAND302
84	SNARERIM12	169	OPEN HIHAT07	252	COWBELL3	337	EXPAND045	423	EXPAND131	509	EXPAND217	595	EXPAND303
85	SNARERIM13	170	OPEN HIHAT08	253	VIBRASLAP	338	EXPAND046	424	EXPAND132	510	EXPAND218	596	EXPAND304

DEMO SONG LIST

NO.	SONG
1	16BEAT1.mid
2	16BEAT2.mid
3	16BEAT3.mid
4	8BEAT1
5	8BEAT2
6	ROCK1
7	ROCK2
8	ROCK3
9	ROCK4
10	BALLARD1
11	BALLARD2
12	BALLARD3
13	BALLARD4
14	BASSLINE
15	POP BALLAD
16	DANCE1
17	DANCE2
18	DANCE3
19	POP
20	BEGUINE
21	FUNK
22	SWING1
23	SWING2
24	SWING3
25	SWING4
26	LATIN 1
27	LATIN 2
28	SLOWROCK1
29	SLOWROCK2
30	JAZZ