# **AC15-B** ACOUSTIC AMPLIFIER

### IMPORTANT SAFETY INSTRUCTIONS

Please read before using this product and strictly follow the owner's manual Please keep this manual for future reference.



- 1. Connect the amplifier ONLY to a properly grounded AC outlet of the proper voltage for your amp.
- 2. Avoid the thread to be under kick or heavily hustled.
- 3. Do not block any ventilation openings on this amplifier.
- 4. Do not operate near any heat source.
- 5. Do not expose this amplifier to rain or moisture.
- 6. Disconnect the power cord if the amplifier is not in use for longer period.
- 7. To reduce the risk of electric shock, DO NOT remove the cover.

#### **WARNINGS**

You must use this device only with an AC outlet of the correct voltage





To reduce the risk of fire or electric shock. Do not expose this apparatus to rain or moisture. To reduce the risk of electric shock. Do not remove cover. Refer servicing to qualified service personnel for repair this apparatus.




The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.




The lighting flash & arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of danger.

# PANEL DESCRIPTIONS

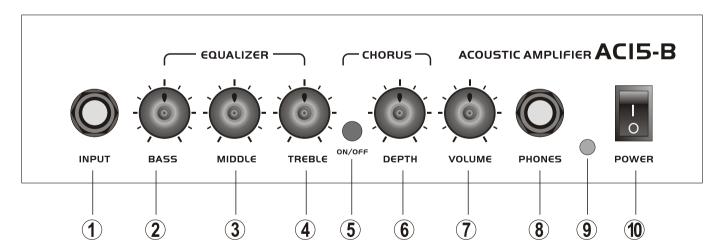

- 1. INPUT (1/4" MONO): Use this jack to connect your acoustic guitar to the amplifier.
- 2. BASS: Use this control to boost or cut the low frequency within  $\pm 9 \, \mathrm{dB}$
- 3. MIDDLE: Use this control to boost or cut the mid frequency within  $\pm 9 dB$ .
- 4. TREBLE: Use this control to boost or cut the high frequency within  $\pm 9 \text{dB}$
- 5. CHORUS: when the control at 'OFF' position, the chorus effect is not in use.
- 6. DEPTH: Use this control to adjust the depth of chorus effect.
- 7. VOLUME: Use this control to adjust the output level.
- 8. HEADPHONE (1/4"STEREO): Use this jack to connect headphone for silent practice. The internal speaker is disconnected when this jack is used.
- Power Indicator
- 10.POWER SWITCH: Use this switch to turn the amplifier on/off.

### **REAR PANEL**

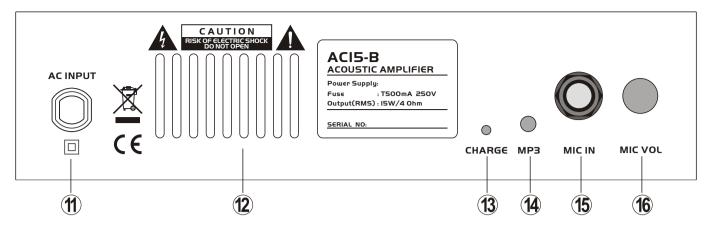

- 11.AC INPUT Socket.
- 12. Window for heat dissipation.
  13. Charging Indicator: when fully charged, the indicator would go out slowly.
  14. MP3 In: connect audio input of MP3.
  15. MIC In (1/4"): connect input of MIC.
  16. MIC VOL: adjust the VOL of MIC.

# **SPECIFICATION**

Input sensitive/Impedance	MIC IN/-43dBu INPUT-38dBu/470KΩ, MP3 IN/-12dBu
Output(RMS)Speaker	15W/4 Ohm
Connection(1/4 " )	
	MIC IN(1/4") MP3 Input
Effects EQ(3 Band EQ)	Chorus (with depth control)
Power Input	100V/50Hz-60Hz, 110V/60Hz, 220V/50Hz, 230V/50Hz, 240V/50Hz
Net weight Packing Size	