



▲
Almost in Tune



▲
In Tune

The FT220 tuner will automatically detect the pitch you are closest to and display this on the screen.

The arm/arrow indicator will show whether you are either sharp or flat in relation to the displayed note, and will turn green when you are in tune.

For example, playing your E string may show C#, D, D#, E, F, F# or even G on the tuner. The intended pitch is E, so if the note displayed is lower than E, tune up, if it is higher than E, tune down.

When E is displayed on the screen, the arm/arrow will indicate the minor adjustments needed to reach pitch.

You can find more information and a detailed tuning guide at the web address below:
www.artistguitars.com.au/how_to_tune_your_guitar



WARNING: Button cell batteries are hazardous. Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little 2 hours due to internal burns. **If swallowed, go straight to hospital emergency room.** Dispose of use battery immediately. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 and you will be directed to the nearest hospital or emergency service that can manage the injury. If the battery compartment does not close securely, Stop using the product and keep it away from children.