

# BM6 GUITAR AMPLIFIER



Beta Aivin

## IMPORTANT SAFETY INSTRUCTIONS

Please read before using this product and strictly follow the owner's manual  
Please keep this manual for future reference.

1. Connect the amplifier ONLY to a properly grounded AC outlet of the proper voltage for your amp.
2. Avoid the thread to be under kick or heavily hustled.
3. Do not block any ventilation openings on this amplifier.
4. Do not operate near any heat source.
5. Do not expose this amplifier to rain or moisture.
6. Disconnect the power cord if the amplifier is not in use for longer period.
7. To reduce the risk of electric shock, DO NOT remove the cover.

## CAUTION


**Voltage: AC 220V~50Hz**




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



To reduce the risk of fire or electric shock. Do not expose this apparatus to rain or moisture. To reduce the risk of electric shock. Do not remove cover. Refer servicing to qualified service personnel for repair this apparatus.

 The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and servicing instructions.

 The lighting flash & arrowhead symbol, within an equilateral triangle, is intended to alert you to the presence of danger.

## SPECIAL INSTRUCTIONS FOR BATTERY AMPLIFIER

1. When connecting AC Power Supply, the chargeable circuit works under power on/off mode.  
Please disconnect AC Power Supply if the unit is not in use or the battery full charged.
2. Under CHARGE mode, the charge indicator is bright; the indicator is extinct when battery full charged.
3. To prolong the battery life and saving your cost, suggest using AA type Ni-MH rechargeable (x10) battery, Maximum 10-hour continuous use.
4. When using dry battery, please DISCONNECT AC Power Supply.

## PANEL DESCRIPTION

1. INPUT(1/4" MONO) :  
Use this jack to connect your guitar to the amplifier.

### CHA


2. VOLUME  
Use this control in conjunction with your instrument's volume controls to adjust the output level of Channel A.

### 3. CHA-LED

This LED illuminates when the Channel A is selected.

### 4. CHA/CHB SWITCH

Use This switch to select the Channel A or Channel B. When the switch is depressed, the Channel B is selected. With the switch in the out position, the Channel A is selected. The external footswitch is active only when the Channel A is selected.

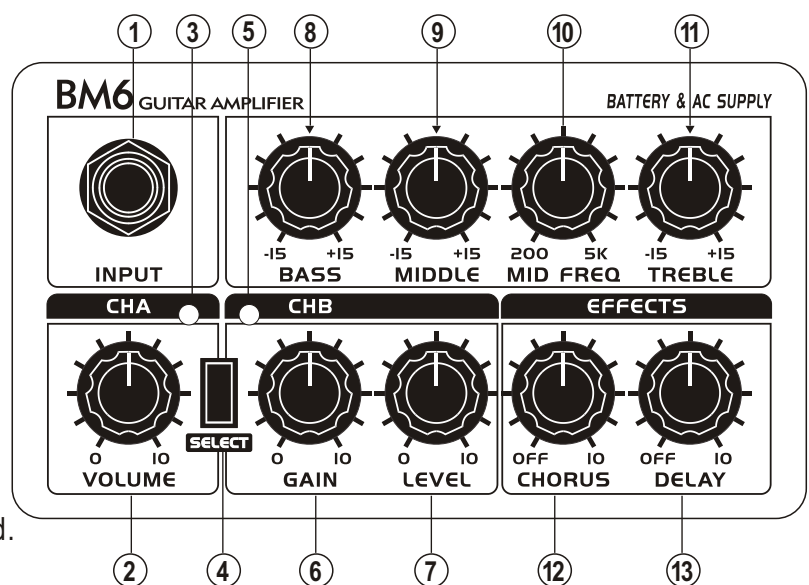

### CHB

5. CHB-LED: This LED illuminates when the Channel B is selected.

6. **GAIN:** Use this control to adjust the amount of distortion in Channel B.
7. **LEVEL:** Use this control to adjust the output level of Channel B.


## EQ

8. **BASS:** Use this control to boost or cut the low frequency within  $\pm 15\text{dB}$ .
9. **MIDDLE:** Use this control to boost or cut the mid frequency within  $\pm 15\text{dB}$ .
10. **MID FREQ:**  
Use this control to adjust the frequencies of middle range (200Hz--5kHz). Turn this knob clockwise to raise the mid frequencies and counter-clockwise rotate the knob to lower the mid frequencies.
11. **TREBLE:** Use this control to boost or cut the high frequency within  $\pm 15\text{dB}$ .

## EFFECT

12. **CHORUS**  
Use this control to adjust the speed of chorus effect, when the control at "OFF" position, the chorus effect is not in use.
13. **DELAY**  
Use this control to adjust the feedback and time of delay effect, when the control at "OFF" position, the delay effect is not in use.

## THE REAR PANEL

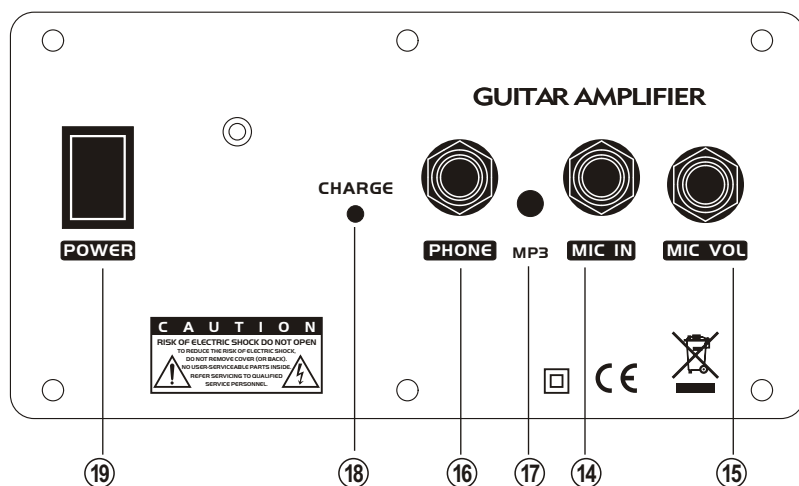

14. **MIC INPUT (1/4" MONO)**  
Use this jack to connect a microphone to the amplifier.
15. **MIC LEVEL**  
Use this control to adjust the input level of microphone.
16. **HEADPHONE (1/4" STEREO)**  
Use this jack to connect headphone for silent practice.  
The internal speaker is disconnected when this jack is used.
17. **STEREO INPUT (1/8" STEREO)**  
Use this jack to connect MP3 player for jamming and practice.
18. **CHARGE INDICATOR**
19. **POWER SWITCH**  
Use this switch to turn the amplifier on/off.

## SPECIFICATION

Output (RMS)	-----10W
Input Sensitivity/ Impedance	-----INPUT -10dBu/1M $\Omega$
Speaker/ Impedance	-----6.5 inch/4 ohm
Controls	-----Volume, Gain, Level, Chorus, Delay
	-----MIC Volume, Treble, Middle, Mid Freq, Bass
Connections	-----Input (1/4")
	-----Headphone (1/4")
	-----MP3 Input (1/8")
	-----Microphone Input (1/4")
Indicator	-----CHA/ CHB LED
	-----CHARGE INDICATOR
Power Supply	-----AC 220V~50Hz
Dimension	-----235x155x235 mm
Packing Size	-----270x190x280 mm
Net Weight	-----3.4kg (not including battery)
Gross Weight	-----3.7kg (not including battery)
Options	-----AA type rechargeable battery x 10
	-----Strap

[www.beta-aivin.com](http://www.beta-aivin.com)

Beta Aivin continually develops new products, as well as improves existing ones. For this reason, the specifications and information in this manual are subject to change without notice.