



▲
Almost in Tune



▲
In Tune

The FT220 tuner will automatically detect the pitch you are closest to and display this on the screen.

The arm/arrow indicator will show whether you are either sharp or flat in relation to the displayed note, and will turn green when you are in tune.

For example, playing your E string may show C#, D, D#, E, F, F# or even G on the tuner. The intended pitch is E, so if the note displayed is lower than E, tune up, if it is higher than E, tune down.

When E is displayed on the screen, the arm/arrow will indicate the minor adjustments needed to reach pitch.

You can find more information and a detailed tuning guide at the web address below:
www.artistguitars.com.au/how_to_tune_your_guitar



WARNING: Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little 2 hours due to internal burns. **If swallowed, go straight to hospital emergency room.** Dispose of use battery immediately. If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 and you will be directed to the nearest hospital or emergency service that can manage the injury.